


Polaris ProFit Roll Cage Adapter Instructions

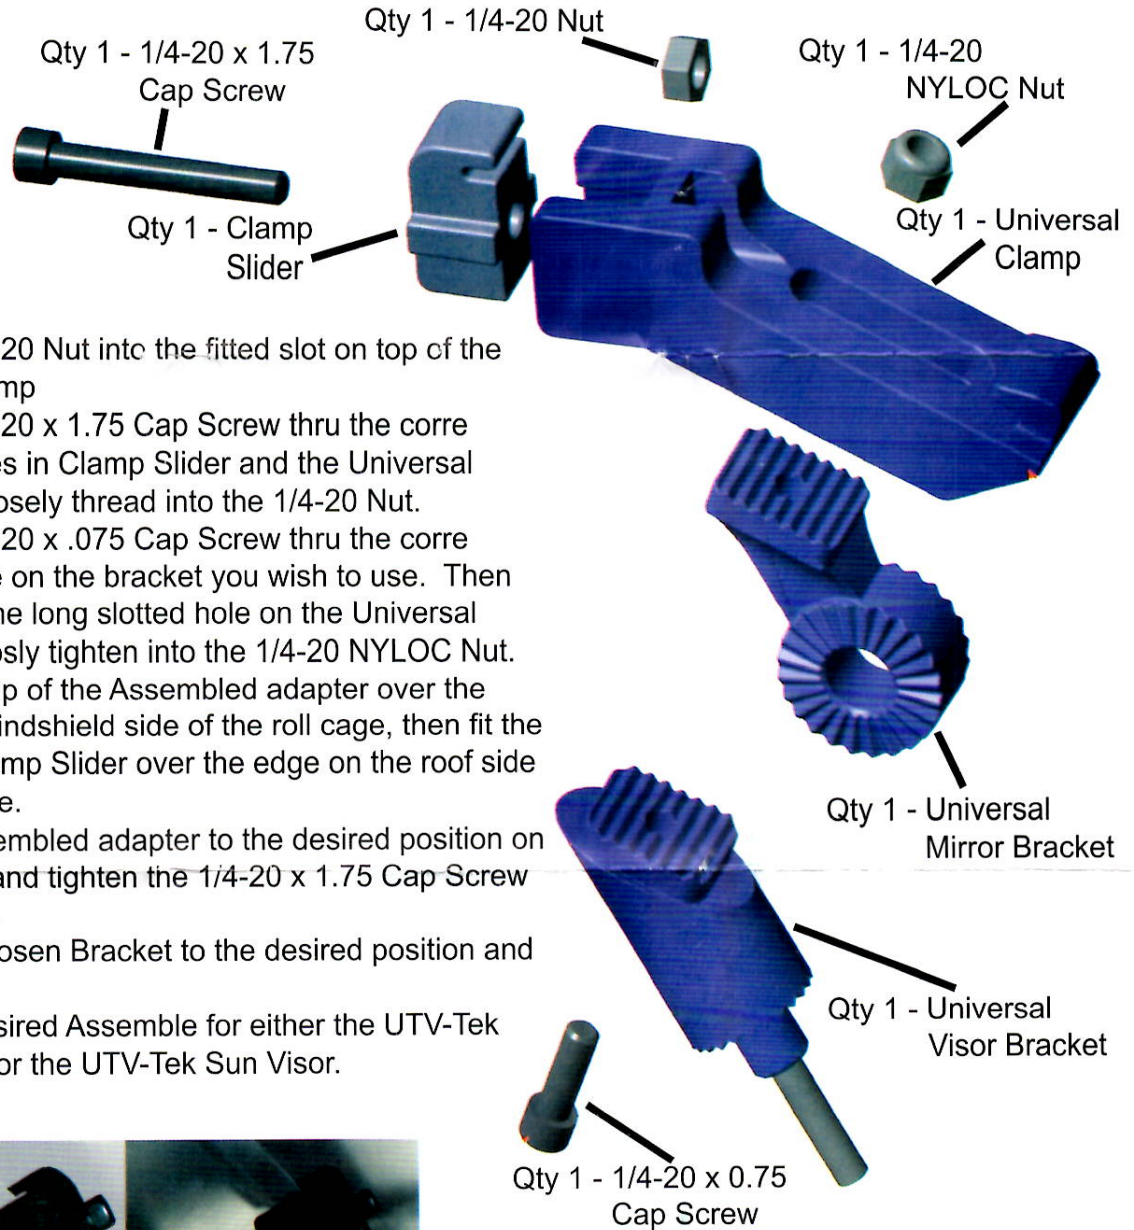

1. Insert the 1/4-20 Nut into the fitted slot on top of the Universal Clamp
2. Insert the 1/4-20 x 1.75 Cap Screw thru the corresponding holes in Clamp Slider and the Universal Clamp and loosely thread into the 1/4-20 Nut.
3. Insert the 1/4-20 x .075 Cap Screw thru the corresponding hole on the bracket you wish to use. Then insert it thru the long slotted hole on the Universal clamp and loosely tighten into the 1/4-20 NYLOC Nut.
4. Fit the lower lip of the Assembled adapter over the edge of the windshield side of the roll cage, then fit the slot of the Clamp Slider over the edge on the roof side of the roll cage.
5. Slide the Assembled adapter to the desired position on the roll cage and tighten the 1/4-20 x 1.75 Cap Screw to fix in place.
6. Adjust the Chosen Bracket to the desired position and tighten
7. Attach the desired Assemble for either the UTV-Tek Center Mirror or the UTV-Tek Sun Visor.

