ELITE SERIES UTV **SIDE MIRROR**

INSTALLATION INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE PROCEEDING

WARNING

Make sure key is in the off position and the vehicle is in park and/or parking brake engaged.


Use wheel chocks in front and behind the rear wheels during installation procedure.



Required Tool:

5mm Hex/Allen Wrench

1. LOCATE DESIRED MOUNTING POSITION








Choose correct clamp for your roll cage. Use the smaller clamp for 1 5/8" to 1 3/4" dia. and the larger clamp for 1 7/8" - 2" dia. Place the rubber insert into the tubular clamp you are using. Use the profiled clamp for profiled roll cages. Insert ends of mounting clamps through the mounting base hole. Partially tighten clamps around roll cage until they are almost tight but leave the mounting block *still loose enough to slide*. Make the necessary fine adjustments to the mounting position and then tighten until snug. *DO NOT OVER TIGHTEN!* The clamps may relax slightly over time, re-tighten until snug as necessary.

3. SET RETURN TO HOME POSITION



Remove the larger tensioner knob. Remove the mirror from the mount. Use a flat-head screwdriver to lightly pry the adjustment disc off the mounting block spline. Reposition the adjustment disc roughly perpendicular to the roll cage and gently slide back down onto the spline until seated. Reassemble the mirror to the block.

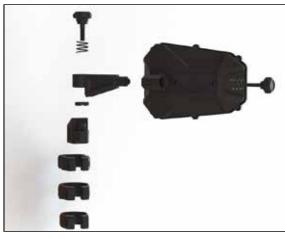

Kit Contains:

- (1) mirror head
- (1) mirror arm
- (2) tensioner knobs
- (1) mounting base
- (3) mounting clamps
- (1) Adjustment Disc
- (2) Arm Springs
- * (x2) for two Packs