



THUMPER FAB

Aluminum Audio Roofs ♦ Roll Cages ♦ UTV Accessories

Can-Am Defender Cell Phone Charging Mount

SKU: TF040904



Thumper Fab

5103 Elysian Fields Rd, Marshall, TX 75672

Customer Service: 903-472-0928

www.thumperfab.com

Ver. 0522

Can-Am Defender Cell Phone Mount Installation Manual

SKU: TF040904




PARTS

QTY	REF	DESCRIPTION
1	1	Dash Mount Plate
1	2	Wireless Phone Charger
Hardware Kit		
A	5	#14 x 3/4" Truss Head Phillips Screw
B	3	#6-32 x 1" Socket Cap Screw
C	3	#6-32 x 1" Nylon Lock Nut
D	3	#6 Flat Washers
E	2	Piggy Back Spade Connectors

TOOLS

- Drill
- 1/2" Drill Bit
- #3 Phillips Head Bit
- 1/8" Allen Wrench
- 5/16" Wrench

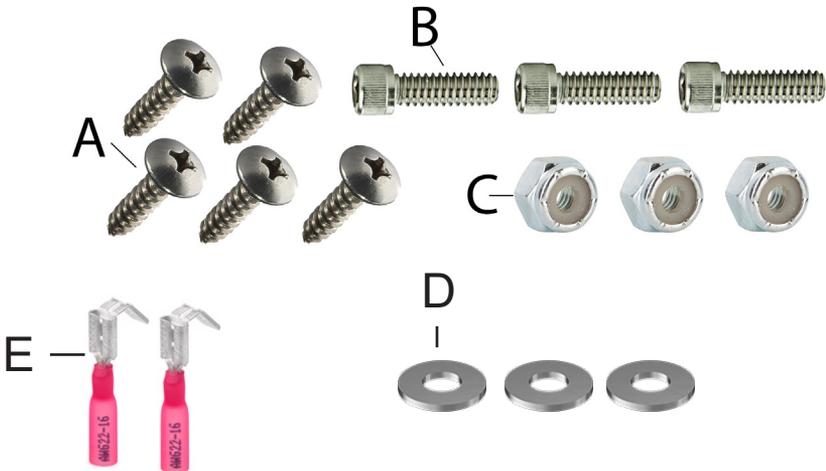

BEFORE YOU BEGIN

If you do not feel comfortable installing your **Thumper Fab** Cell Phone Charging Mount, please see your nearest Can-Am® Dealer for installation.

INSTALLATION INSTRUCTIONS

Install Wireless Phone Charger Mount to Dash Mounting Plate

Run phone charger wires through center hole of mounting plate and use 3 X #6-32 x 1" socket cap screws (**B**) 3 X #6-32 Nylon Insert Lock Nut (**C**) 3 X #6 Washers (**D**) to fasten wireless phone charger (**2**) to the dash mounting plate (**1**) (**FIG 1**).



FIG 1 - Fasten Wireless Phone Charger to Dash Mount Plate using 1/8" Allen Wrench and 5/16" Wrench

Drill hole using 1/2" drill bit & run wires through hole. Fasten wireless phone charger (**2**) and dash mount plate (**1**) to dash, using a drill and 5 X #14 x 3/4" truss head phillips screws (**A**), careful not to over tighten. Refer to wiring instruction inside wireless phone charger box. (**FIG 2**).



FIG 2 - Fasten Dash Mount Plate to dash using Drill



THUMPER FAB

Thumper Fab

5103 Elysian Fields Rd, Marshall, Tx 75672

Customer Service: 903-472-0928

www.thumperfab.com