


CF Moto U10 Pro
Rear Control Arms

SKU: TF281201.R

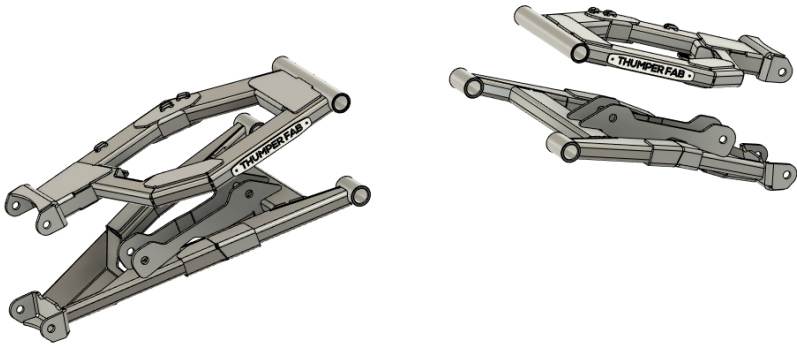

Thumper Fab
5103 Elysian Fields Rd, Marshall, TX 75672
Customer Service: 903-472-0928

CF Moto U10 Pro

Rear Control Arms

SKU: TF281201.R







PARTS

REF	QTY	DESCRIPTION
1	1	Rear Upper Control Arm - Driver
2	1	Rear Upper Control Arm - Passenger
3	1	Rear Lower Control Arm - Driver
4	1	Rear Lower Control Arm - Passenger
5	8	Zip Ties

TOOLS

- Snips
- 15mm Socket and Wrench
- 18mm Socket and Wrench

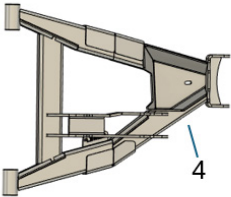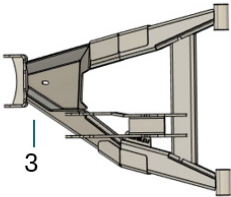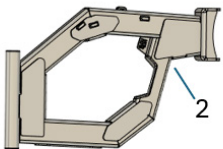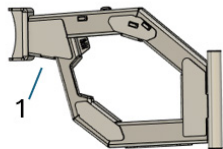

Torque Specs:

SIZE (STANDARD)	GRADE 5	GRADE 8	SIZE (METRIC)	CLASS 8.8	CLASS 10.9
5/16"	15 ft/lbs	20 ft/lbs	6MM	5 ft/lbs	9 ft/lbs
3/8"	30 ft/lbs	35 ft/lbs	8MM	18 ft/lbs	23 ft/lbs
7/16"	45 ft/lbs	60 ft/lbs	10MM	32 ft/lbs	45 ft/lbs
1/2"	65 ft/lbs	90 ft/lbs	12MM	55 ft/lbs	75 ft/lbs
9/16"	95 ft/lbs	130 ft/lbs	14MM	85 ft/lbs	120 ft/lbs
5/8"	135 ft/lbs	175 ft/lbs	16MM	130 ft/lbs	165 ft/lbs
3/4"	185 ft/lbs	280 ft/lbs	18MM	170 ft/lbs	240 ft/lbs

BEFORE YOU BEGIN

If you do not feel comfortable installing your **Thumper Fab** Rear Control Arms please see your nearest CF Moto® Dealer for installation.

INSTALLATION INSTRUCTIONS

Installation Preparation

Remove the OEM upper control arm after unfastening the brake line and brake cable from the upper control arm. Disconnect the shock and sway bar end link from the OEM lower control arm. Remove the lower control arm by unfastening the arm from the knuckle and the frame (**FIG 1**).



FIG 1 - Remove OEM Control Arms

Pass the shock through the upper control arm before mounting the arm to the frame and the knuckle using OEM hardware. Snug hardware up using a 15mm socket and an 18mm wrench. Do not fully tighten at this time (**FIG 2**).



FIG 2 - Fasten Upper Control Arm to vehicle

INSTALLATION INSTRUCTIONS

Installation

Fasten the lower control arm to the frame using the OEM hardware. Do not fully tighten at this time (**FIG 3**).

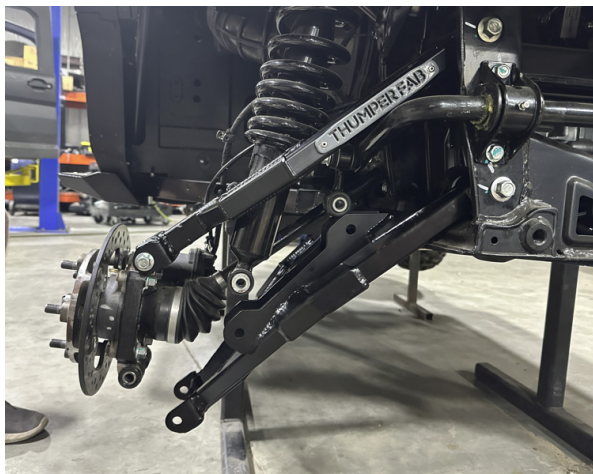


FIG 3 - Fasten Lower Control Arm to the Frame

Attach the lower control arm to the knuckle using the OEM hardware (**FIG 4**).

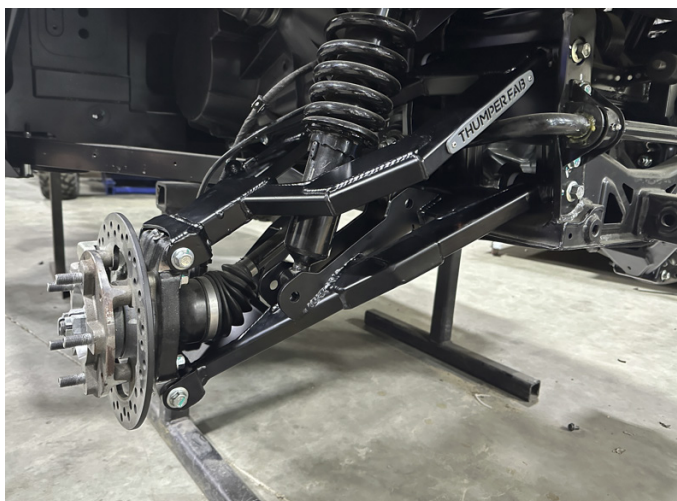


FIG 4 - Attach the Lower Control Arm to the Knuckle

INSTALLATION INSTRUCTIONS

Installation

Mount the shock to the lower control arm using the hardware removed during disassembly (**FIG 5**).



FIG 5 - Mount the shock to the Lower Control Arm

Fasten the sway bar end link to the lower control arm (**FIG 6**).



FIG 6 - Attach the sway bar to the Lower Control Arm

INSTALLATION INSTRUCTIONS

Installation

Fully tighten all mounting hardware for the control arms, shock, and the sway bar end link (**FIG 7**).



FIG 7 - Tighten all hardware

Remove the OEM clamps from the brake line and parking brake cable (**FIG 8 & FIG 9**).



FIG 8 & FIG 9 - Remove OEM brake line clamps

INSTALLATION INSTRUCTIONS

Installation

Zip tie the brake line and the parking brake cable to the zip tie provisions on the upper control arm. Use snips to clip off any excess zip tie for a clean finish (**FIG 10**).



FIG 10 - Zip tie Brake Line and Parking Brake Cable to Upper Control Arms

INSTALLATION INSTRUCTIONS

PRODUCT DISCLAIMER

The installation of products sold or manufactured by Thumper Fabrication, LLC (Thumper Fab) including, but not limited to suspension components such as lift kits, audio roofs, roll cages, frame stiffener kits, and tires that exceed the original specifications for the vehicle, may change the vehicle's center of gravity and handling characteristics both on- and off-road. You are aware that the installation of tires that are larger than original vehicle specifications may reduce the effectiveness of the braking system. Use of these products may place added stress to the original factory vehicle components which could cause them to weaken or possibly fail.

Products sold or manufactured by Thumper Fab are intended for off-road use only. Operation of a vehicle modified with these products on a road could result in serious bodily injury or death, and such operation may violate the laws of your state or municipality. You agree to operate your vehicle exclusively in the manner intended by the vehicle manufacturer. You agree that failure to safely and reasonably operate your vehicle could result in serious bodily injury or death, and that, as a result of installation of this product(s) to your vehicle, extreme care must be taken to prevent vehicle rollover or loss of control, which may be more likely to occur as a result of said modifications. You will avoid unsafe maneuvers, including sudden sharp turns or other abrupt maneuvers, which could make a vehicular accident more likely. You understand that Thumper Fab is not responsible or liable for any damages or any injuries to yourself or your passengers that could occur upon possible accidents due to driver error, incorrect installations, bad judgment, incompatibility with other aftermarket accessories or natural disasters to the fullest extent allowable by law. You will have all vehicle occupants fasten seatbelts, if equipped, and wear proper safety equipment, such as DOT approved helmet and eye protection prior to operating the vehicle. You understand and acknowledge that failure to wear proper safety equipment may increase the risk of serious bodily injury or death to yourself and any passengers.

Proper installation of products sold or manufactured by Thumper Fab requires knowledge of the factory recommended procedures for removal and installation of original equipment components. Installation of these products without proper knowledge and experience may affect the performance of these components and the safety of the vehicle and cause serious bodily injury or death. It is strongly recommended that a certified mechanic familiar with the installation of similar components perform the product(s) installation.

Prior to installing any products sold or manufactured by Thumper Fab, you will perform or cause to be performed an inspection of their vehicle to confirm its condition is suitable for the installation of these products. A proper inspection of the vehicle includes confirmation that the vehicle has not been in a collision and is free of corrosion. If the vehicle is suspected to have been in a collision or misused, or is otherwise unsuitable for modification, you will not install the product(s). You will continue to inspect the vehicle prior to each use to confirm its condition is suitable for its intended use, and you acknowledge that the failure to do so may result in serious bodily injury or death, as well as damage to the vehicle itself.

You will install any warning labels provided with the product so it may be prominently seen by yourself and all passengers. You will notify all passengers of the modifications performed to your vehicle prior to operation.

Insurance companies may handle coverage of a modified vehicle differently. Please check with your insurance carrier prior to modifying the vehicle to ensure your coverage remains sufficient. Installation of this product(s) may void your vehicle warranty. If this is a concern, please check with the manufacturer or dealer before purchase or installation of this product(s).



Thumper Fab

5103 Elysian Fields Rd, Marshall, TX 75672

Customer Service: 903-472-0928

www.thumperfab.com