

**CF Moto Uforce /U10 Pro**  
**2 Inch Lift Kit**

SKU: TF281301



**Thumper Fab**  
5103 Elysian Fields Rd, Marshall, TX 75672  
Customer Service: 903-472-0928

# CF Moto Uforce /U10 Pro

## 2 Inch Spacer Lift Kit

SKU: TF281301




### PARTS

REF	QTY	DESCRIPTION
1	4	Spacers

### TOOLS

- 16mm Socket
- 18mm Socket
- 19mm socket
- 16mm Wrench
- 18mm Wrench
- Spring Compressor
- Torque Wrench

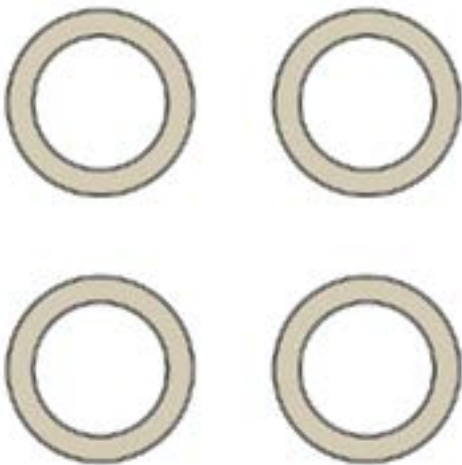

Torque Specs:

SIZE (STANDARD)	GRADE 8	GRADE 9	SIZE (METRIC)	CLASS 8.8	CLASS 10.9
5/16"	15 ft/lbs	20 ft/lbs	8MM	9 ft/lbs	9 ft/lbs
3/8"	30 ft/lbs	35 ft/lbs	9MM	18 ft/lbs	23 ft/lbs
7/16"	45 ft/lbs	60 ft/lbs	10MM	32 ft/lbs	45 ft/lbs
1/2"	65 ft/lbs	90 ft/lbs	12MM	55 ft/lbs	75 ft/lbs
9/16"	95 ft/lbs	130 ft/lbs	14MM	85 ft/lbs	120 ft/lbs
5/8"	135 ft/lbs	175 ft/lbs	16MM	130 ft/lbs	190 ft/lbs
3/4"	185 ft/lbs	260 ft/lbs	18MM	170 ft/lbs	240 ft/lbs

### BEFORE YOU BEGIN

If you do not feel comfortable installing your **Thumper Fab** Spacer Lift Kit , please see your nearest CF Moto® Dealer for installation.

# INSTALLATION INSTRUCTIONS

## Remove Wheels

Place jacks under the vehicle and lift the unit high enough that the tire clears the ground, then place jacks under the frame of the vehicle. Now you can remove the tires with a 19mm socket and set aside (**FIG 1**).



Fig 1- Remove Wheels

# INSTALLATION INSTRUCTIONS

## Remove Shocks From Vehicle

Using a 16mm and 18mm sockets and wrenches remove the upper and lower shock bolts (**FIG 2**).



Fig 2 - Remove Shocks

## INSTALLATION INSTRUCTIONS

### Remove Spring From Shock

There are several different types of spring compressors available, please try to keep safety in mind when compressing the spring! Using your spring compressor, compress the spring enough so that the spring keeper can be removed by hand easily (**FIG 3 & FIG 4**).



Fig 3 & Fig 4- Remove the spring from the shock

## INSTALLATION INSTRUCTIONS

### Install spacer

You can slide the spacer onto the shock body followed by the spring and then the keeper. Carefully release the tension from the spring compressor while making sure the keeper is seated properly (**FIG 5**).



Fig 5 - Install spacer

You are now ready to place your shock back onto your vehicle in the reverse order they were removed be sure to torque all hardware and lug nuts to factory specs using your torque wrench (**FIG 6**).



Fig 6 - Replace Shock Assemblies and reinstall wheels

# INSTALLATION INSTRUCTIONS

## PRODUCT DISCLAIMER

The installation of products sold or manufactured by Thumper Fabrication, LLC (Thumper Fab) including, but not limited to suspension components such as lift kits, audio roofs, roll cages, frame stiffener kits, and tires that exceed the original specifications for the vehicle, may change the vehicle's center of gravity and handling characteristics both on- and off-road. You are aware that the installation of tires that are larger than original vehicle specifications may reduce the effectiveness of the braking system. Use of these products may place added stress to the original factory vehicle components which could cause them to weaken or possibly fail.

Products sold or manufactured by Thumper Fab are intended for off-road use only. Operation of a vehicle modified with these products on a road could result in serious bodily injury or death, and such operation may violate the laws of your state or municipality. You agree to operate your vehicle exclusively in the manner intended by the vehicle manufacturer. You agree that failure to safely and reasonably operate your vehicle could result in serious bodily injury or death, and that, as a result of installation of this product(s) to your vehicle, extreme care must be taken to prevent vehicle rollover or loss of control, which may be more likely to occur as a result of said modifications. You will avoid unsafe maneuvers, including sudden sharp turns or other abrupt maneuvers, which could make a vehicular accident more likely. You understand that Thumper Fab is not responsible or liable for any damages or any injuries to yourself or your passengers that could occur upon possible accidents due to driver error, incorrect installations, bad judgment, incompatibility with other aftermarket accessories or natural disasters to the fullest extent allowable by law. You will have all vehicle occupants fasten seatbelts, if equipped, and wear proper safety equipment, such as DOT approved helmet and eye protection prior to operating the vehicle. You understand and acknowledge that failure to wear proper safety equipment may increase the risk of serious bodily injury or death to yourself and any passengers.

Proper installation of products sold or manufactured by Thumper Fab requires knowledge of the factory recommended procedures for removal and installation of original equipment components. Installation of these products without proper knowledge and experience may affect the performance of these components and the safety of the vehicle and cause serious bodily injury or death. It is strongly recommended that a certified mechanic familiar with the installation of similar components perform the product(s) installation.

Prior to installing any products sold or manufactured by Thumper Fab, you will perform or cause to be performed an inspection of their vehicle to confirm its condition is suitable for the installation of these products. A proper inspection of the vehicle includes confirmation that the vehicle has not been in a collision and is free of corrosion. If the vehicle is suspected to have been in a collision or misused, or is otherwise unsuitable for modification, you will not install the product(s). You will continue to inspect the vehicle prior to each use to confirm its condition is suitable for its intended use, and you acknowledge that the failure to do so may result in serious bodily injury or death, as well as damage to the vehicle itself.

You will install any warning labels provided with the product so it may be prominently seen by yourself and all passengers. You will notify all passengers of the modifications performed to your vehicle prior to operation.

Insurance companies may handle coverage of a modified vehicle differently. Please check with your insurance carrier prior to modifying the vehicle to ensure your coverage remains sufficient. Installation of this product(s) may void your vehicle warranty. If this is a concern, please check with the manufacturer or dealer before purchase or installation of this product(s).



**Thumper Fab**

5103 Elysian Fields Rd, Marshall, TX 75672

Customer Service: 903-472-0928

[www.thumperfab.com](http://www.thumperfab.com)