


Can-Am Defender HD11
Under Seat Boxes

SKU: TF290003

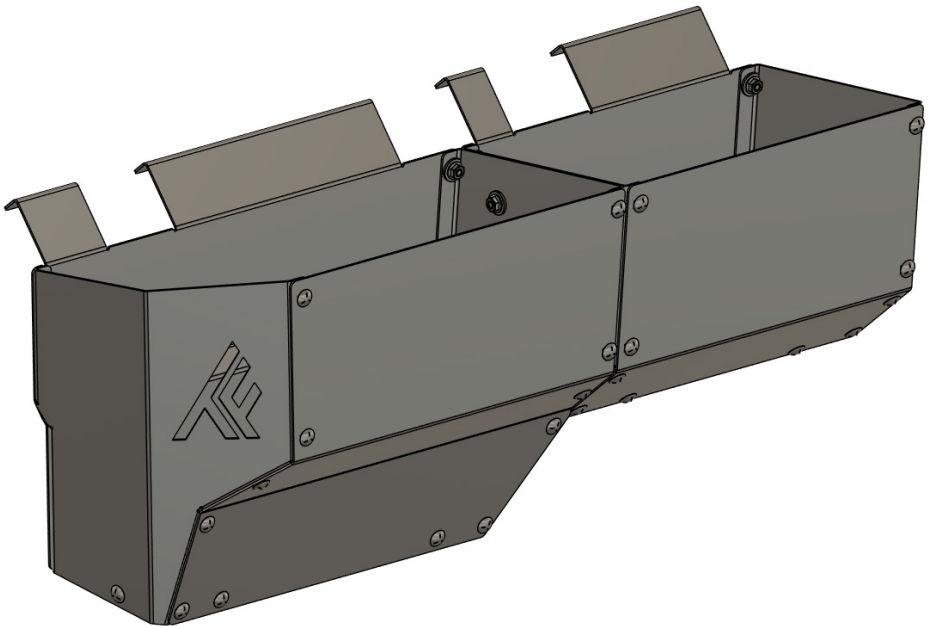

Thumper Fab
5103 Elysian Fields Rd, Marshall, TX 75672
Customer Service: 903-472-0928



PARTS



REF	QTY	DESCRIPTION
1	1	Passenger Back
2	1	Passenger Front
3	1	Passenger Outside
4	1	Passenger Inside
5	1	Passenger Bottom
6	1	Middle Back
7	1	Middle Front
8	1	Middle Passenger
9	1	Middle Driver
10	1	Middle Bottom
DESCRIPTION		
A	8	#10 Screw, 1/2" Long
B	47	1/4"-20, 1/2" Long, Carriage Bolt
C	47	1/4"-20 Flanged Lock Nut

TOOLS

- 7/16" Socket / Wrench
- Phillips bit
- Drill

BEFORE YOU BEGIN

If you do not feel comfortable installing your **Thumper Fab Gun Mount**, please see your nearest Thumper Fab® Dealer for installation.

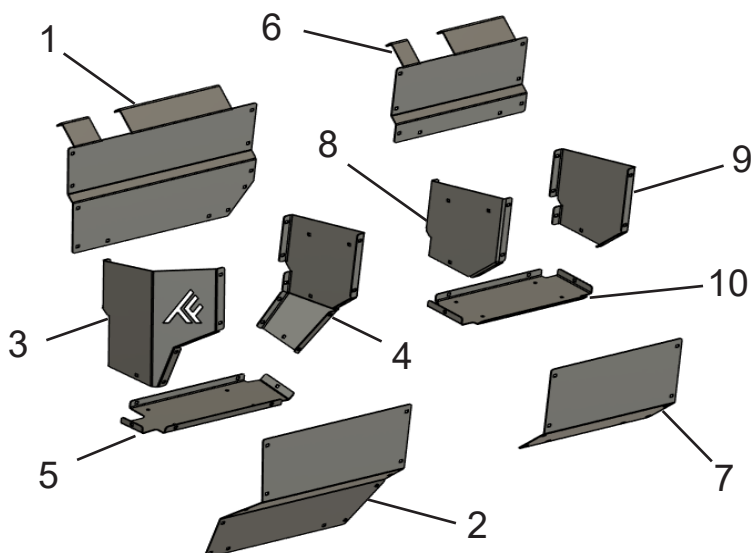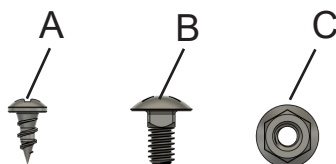

INSTALLATION INSTRUCTIONS

Passenger Box Assembly

Start with the PASSENGER BACK and PASSENGER OUTSIDE. Fasten as shown with the carriage bolts and locknuts provided in the kit. **(FIG 1 & 2).**

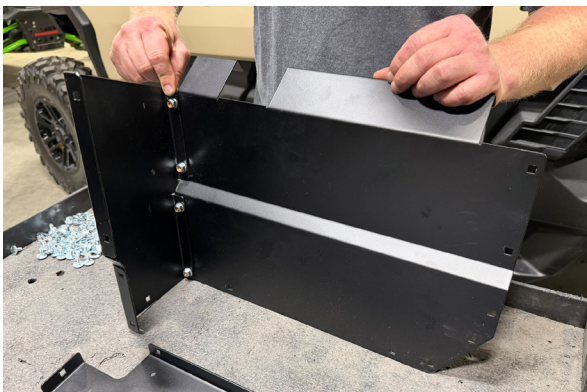


FIG 1



FIG 2

Next, attach the PASSENGER FRONT using more of the carriage bolts and locknuts as shown. **(FIG 3).**

INSTALLATION INSTRUCTIONS



FIG 3

Next, attach the PASSENGER INSIDE. (**FIG 4**).



FIG 4

Next, attach the PASSENGER BOTTOM and tighten all hardware. Set this assembly aside and begin assembly of the middle box. (**FIG 5**).

INSTALLATION INSTRUCTIONS



FIG 5

Next, begin assembling the Middle Box. Start with the MIDDLE BACK and MIDDLE PASSENGER. Assemble these and move onto the next step (**FIG 6**).



FIG 6

Next, attach the MIDDLE FRONT. (**FIG 7**).

INSTALLATION INSTRUCTIONS



FIG 7

Attach the MIDDLE DRIVER. (FIG 8).

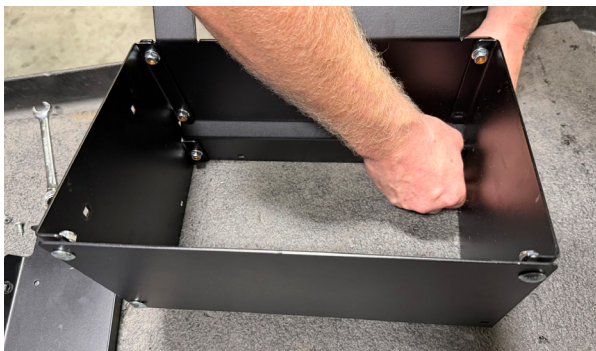


FIG 8

Attach the MIDDLE BOTTOM. (FIG 9).



FIG 9

INSTALLATION INSTRUCTIONS

Next, tighten all hardware and attach the two assemblies together as shown below (**FIG 10 & 11**).



FIG 10

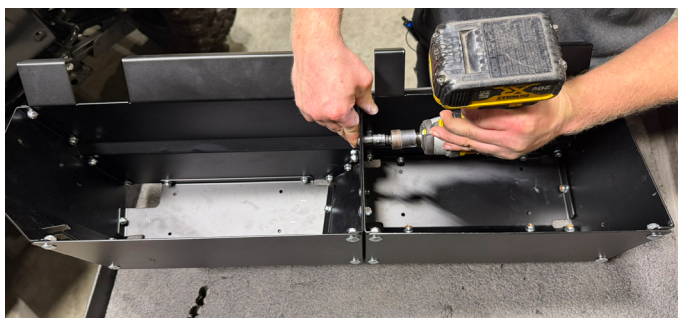


FIG 11

Next, begin installing the boxes into the unit as shown. (**FIG 12**).

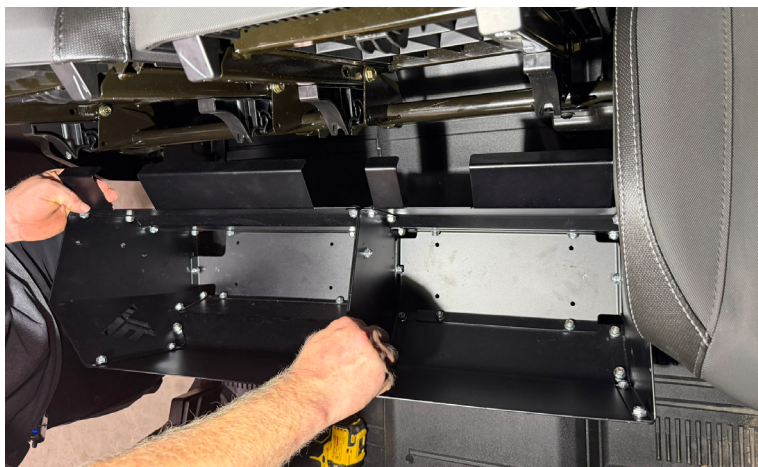


FIG 12

INSTALLATION INSTRUCTIONS

Next, align the extruded plastic on the floor board with the hole in the bottom of the PASSENGER BOX. (**FIG 13**).

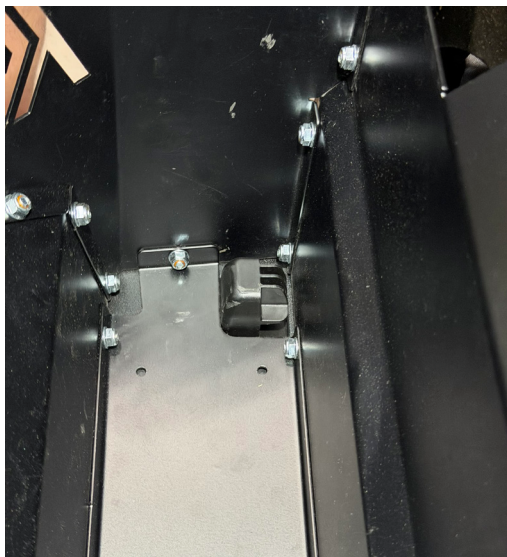



FIG 13

Once the boxes are set in place, use the #10 screws in the kit to fasten the boxes to the floor board as shown below. (**FIG 14**).



FIG 14

INSTALLATION INSTRUCTIONS

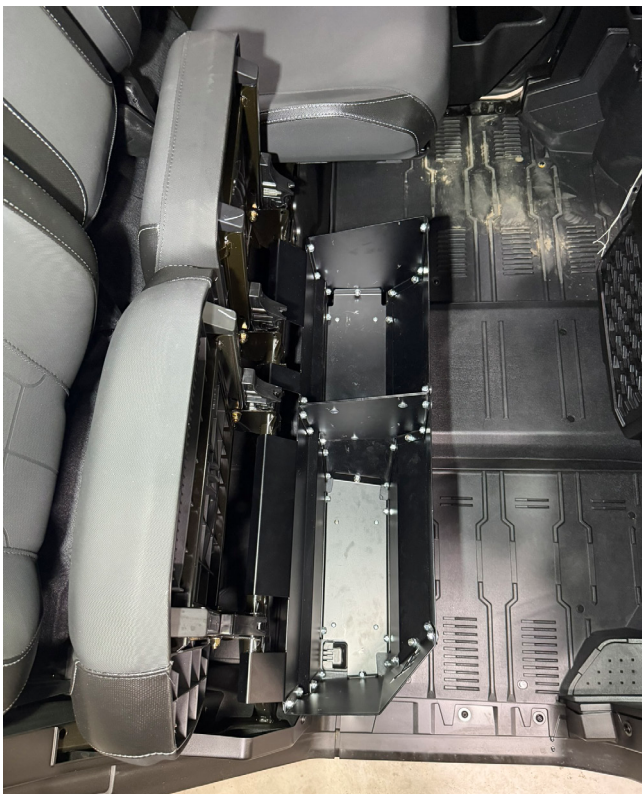

INSTALLATION INSTRUCTIONS

PRODUCT DISCLAIMER

The installation of products sold or manufactured by Thumper Fabrication, LLC (Thumper Fab) including, but not limited to suspension components such as lift kits, audio roofs, roll cages, frame stiffener kits, and tires that exceed the original specifications for the vehicle, may change the vehicle's center of gravity and handling characteristics both on- and off-road. You are aware that the installation of tires that are larger than original vehicle specifications may reduce the effectiveness of the braking system. Use of these products may place added stress to the original factory vehicle components which could cause them to weaken or possibly fail.

Products sold or manufactured by Thumper Fab are intended for off-road use only. Operation of a vehicle modified with these products on a road could result in serious bodily injury or death, and such operation may violate the laws of your state or municipality. You agree to operate your vehicle exclusively in the manner intended by the vehicle manufacturer. You agree that failure to safely and reasonably operate your vehicle could result in serious bodily injury or death, and that, as a result of installation of this product(s) to your vehicle, extreme care must be taken to prevent vehicle rollover or loss of control, which may be more likely to occur as a result of said modifications. You will avoid unsafe maneuvers, including sudden sharp turns or other abrupt maneuvers, which could make a vehicular accident more likely. You understand that Thumper Fab is not responsible or liable for any damages or any injuries to yourself or your passengers that could occur upon possible accidents due to driver error, incorrect installations, bad judgment, incompatibility with other aftermarket accessories or natural disasters to the fullest extent allowable by law. You will have all vehicle occupants fasten seatbelts, if equipped, and wear proper safety equipment, such as DOT approved helmet and eye protection prior to operating the vehicle. You understand and acknowledge that failure to wear proper safety equipment may increase the risk of serious bodily injury or death to yourself and any passengers.

Proper installation of products sold or manufactured by Thumper Fab requires knowledge of the factory recommended procedures for removal and installation of original equipment components. Installation of these products without proper knowledge and experience may affect the performance of these components and the safety of the vehicle and cause serious bodily injury or death. It is strongly recommended that a certified mechanic familiar with the installation of similar components perform the product(s) installation.

Prior to installing any products sold or manufactured by Thumper Fab, you will perform or cause to be performed an inspection of their vehicle to confirm its condition is suitable for the installation of these products. A proper inspection of the vehicle includes confirmation that the vehicle has not been in a collision and is free of corrosion. If the vehicle is suspected to have been in a collision or misused, or is otherwise unsuitable for modification, you will not install the product(s). You will continue to inspect the vehicle prior to each use to confirm its condition is suitable for its intended use, and you acknowledge that the failure to do so may result in serious bodily injury or death, as well as damage to the vehicle itself.

You will install any warning labels provided with the product so it may be prominently seen by yourself and all passengers. You will notify all passengers of the modifications performed to your vehicle prior to operation.

Insurance companies may handle coverage of a modified vehicle differently. Please check with your insurance carrier prior to modifying the vehicle to ensure your coverage remains sufficient. Installation of this product(s) may void your vehicle warranty. If this is a concern, please check with the manufacturer or dealer before purchase or installation of this product(s).



Thumper Fab

5103 Elysian Fields Rd, Marshall, TX 75672

Customer Service: 903-472-0928

www.thumperfab.com