

# TRACKER OFF ROAD 800SX FRONT BASKET

P/N: TF070001



## PARTS

| REF | QTY | PART DESCRIPTION           |
|-----|-----|----------------------------|
| 1   | 1   | Front Basket               |
| 2   | 2   | Basket Spacer              |
| 3   | 2   | M10-1.25 x 60 mm Cap Screw |
| 4   | 2   | M10 Flat Washers           |

## TOOLS REQUIRED


- 8 mm Allen Wrench

### BEFORE YOU BEGIN

If you do not feel comfortable installing your Thumper Fab Front Basket please see your nearest Tracker® Dealer for installation.

## INSTALLATION INSTRUCTIONS

1. Remove stock nuts and bolts from cage on front of tracker using 8 mm Allen Wrench.
2. Place Front Basket in position as shown and use the included spacer and M10 hardware to mount to cage. As shown below, the order for installation is M10 cap screw, flat washer, basket, basket spacer, cage, and the nut you removed in step 1. The 8mm Allen Wrench will be used to drive the M10 cap screws. Repeat process on opposite side.

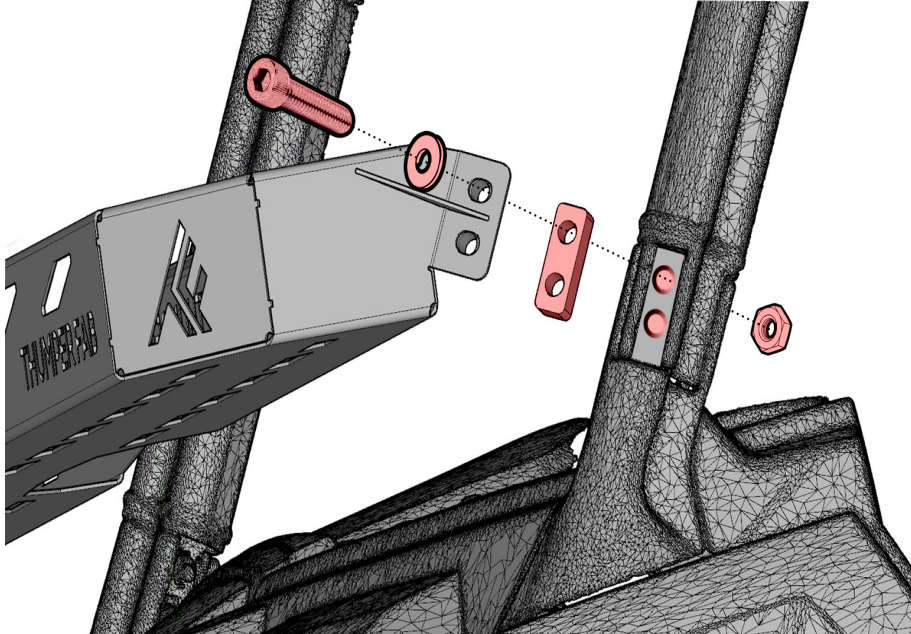

LIKE YOUR THUMPER FAB FRONT BASKET? CHECK OUT OUR OTHER AMAZING PRODUCTS FOR THE TRACKER OFF ROAD 800SX!



**TRACKER 800SX ROOF WITH  
ROOF RACK-CREW**



**TRACKER 800SX NERF RAILS/  
ROCK RAILS**



**TRACKER 800SX HIGH  
CLEARANCE FORWARD FRONT  
CONTROL ARM SET**



**TRACKER 800SX 3" Lift Kit**

# TRACKER OFF ROAD 800SX FRONT BASKET

P/N: TF070001



**Thumper Fab**  
5103 Elysian Fields Rd, Marshall, Tx 75672  
Customer Service: 903-472-0928

[www.thumperfab.com](http://www.thumperfab.com)

**Thumper Fab**  
5103 Elysian Fields Rd, Marshall, Tx 75672  
Customer Service: 903-472-0928

[www.thumperfab.com](http://www.thumperfab.com)